

AEOLUS

Professional Vet Equipments Supplier




AEOLUS

“LegEasy” Pneumatic Lifting Round Lighting Table

FT-838LED-PRO

New
Generation

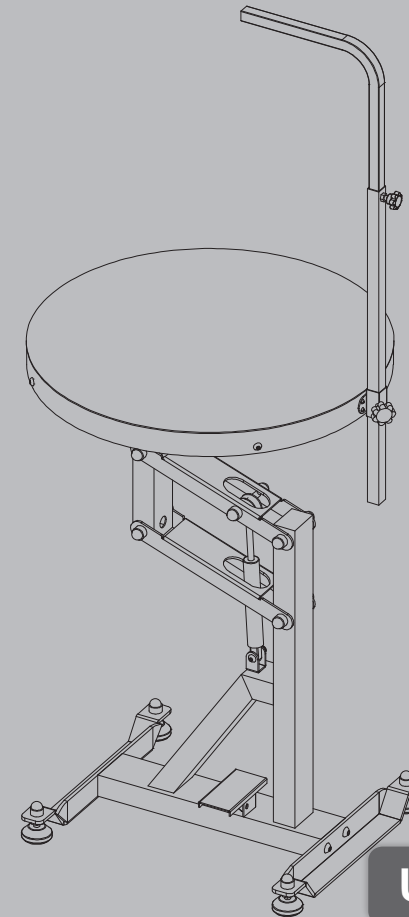

User Manual

Distributor Contacts



AEOLUS

Producer: Shanghai TOEX International Trading Co., Ltd.
Address: Floor 5, Building 6, No.675 Zhujin Road,
Songjiang District, Shanghai, 201615, China

Manufacturer: Shanghai Xunyun Industrial Co., Ltd.
Address: Lane 29, No.1509 East Qianming Road,
Fengjing Town, Jinshan District, Shanghai.

Overview


Pro for Pros

Thank you for purchasing our products!

AEOLUS newly upgraded pattern grooming table FT-838LED-PRO has both brightness and color temperature adjustable. 3000K-6500K wide color temperature range provides perfect light to fit into needed scenario and mood.

It has a rotating and pneumatic lifting tabletop.

FT-838LED-PRO has a round tabletop with 60cm diameter, and is made from heavy duty tempered glass and stainless steel supporting frame.

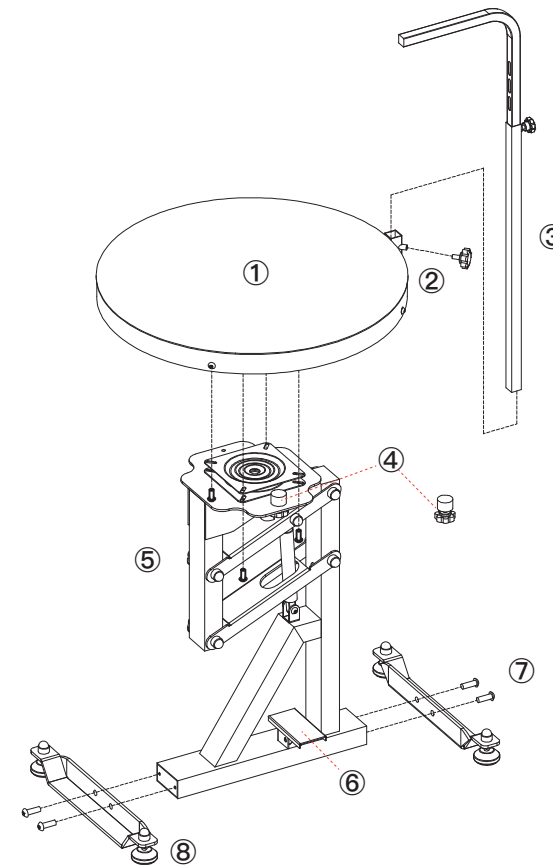

- ① Table top
- ② Grooming arm
- ③ Grooming arm bolt
- ④ Locking bolt
- ⑤ Pneumatic lifting base
- ⑥ Foot pedal
- ⑦ Bolts
- ⑧ Table foot (with adjustable levelers)

Specification

Dimension	Ø23.5"×H27"-38.7" Ø60cm×H68cm-98cm
Net Weight	28kg
Gross Weight	31kg
Package	66x32x70cm
Volume	0.148cbm

Package Inspection

The manufacturer is not liable for any damage caused by a third party "Transport or Delivery Company".

The day the unit is delivered, an inspection of the outer packing should be made for any damage to the packing box.

Then the unit should be unpacked carefully; all components, accessories and the table itself should be inspected for any damage or loss of components.

If any damage is evident, the carrier or dealer should be notified immediately.

Safety Warning

1. Use only as described in this manual. Use only manufacturer's recommended attachments.
2. DO NOT place the product on an uneven or soft ground.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
4. DO NOT modify, disassemble or repair, without the guidance of professionals.
5. Do not put your pet on the table before adjusting the height.

Assembly Instructions

1. Connect the Table Foot to the Pneumatic Lifting Base
Use the Open Wrench to connect the Table Foot to the Pneumatic Lifting Base with the Outside Hex Bolts.
Caution: The four screw holes are near Foot Pedal.
2. Install the Tabletop to the other end of the Pneumatic Lifting Base
Use the Hexagon Wrench to fix the tabletop to the Pneumatic Lifting Base with the Inside Hex Bolts. If you need to rotate the table top, please loose the locking knob, conversely, to tighten the locking knob to fix the table top.
3. Adjust the levelers
Check if the four levelers are horizontal. If not, release the nut above the leveler and rotate the leveler to adjust its height to ensure a stable and steady table.
4. Install the grooming arm
Insert the grooming arm into the slot of the frame and tighten the grooming arm knob to fix it. Adjust the grooming arm to a proper height.

Operation Instructions

1. Adjust the height of the table as your need
Step on the Foot Pedal and the table will rise automatically. Step on the Foot Pedal and press the Table Top to lower the it.
2. If you need to use a LED tabletop, connect the power supply, and turn the LED light on with the remote, or turn on the LED light by pushing the switch button at the side of table edge. The easy-to-use remote is equipped for functional controlling including turn on/off, color temperature adjustment (3000-5000K), and brightness regulation.
3. Put the pet on the table top
Caution: Do not put the pet on the table before adjusting the height.

Maintenance

In between usages, the table should be cleaned with a soft cloth or sponge using a mild cleaning agent.
The moving part of the table should be often lubricated to ensure the smoothness of the movement.

Service Support

Contact us if you cannot solve your problem with this manual.

Dallas

3249 Story Rd. W Irving, TX 75038

Tel: +1 469 525 2580

Web: www.AEOLUSpet.com

Shanghai

Floor 5, Building 6, No. 675, Zhujin Road, Songjiang District, Shanghai, China.

Tel: +86-21-67632060, 67632364